

YAMAHA YHT-S1400 Home Theater Package Connection Guide

English


YAMAHA CORPORATION
© 2009 Yamaha Corporation All rights reserved.
Printed in Malaysia Y WT51140

The Yamaha YHT-S1400 Home Theater Package has what you are looking for to add great sound to your home theater. By following the steps in this Connection Guide, you will have your home theater set up in no time and enjoy music and movies like never before. This guide consists of three sections. The first section explains how to place the speaker and connect the speaker/antenna. The second section explains how to connect the Blu-ray Disc Player and your TV. The third section explains how to connect your satellite/cable set-top box. See the relevant guides or manuals for full instructions and precautions.

Caution: Disconnect all components from AC outlets before proceeding.

Speaker and Antenna

1 Checking the package contents

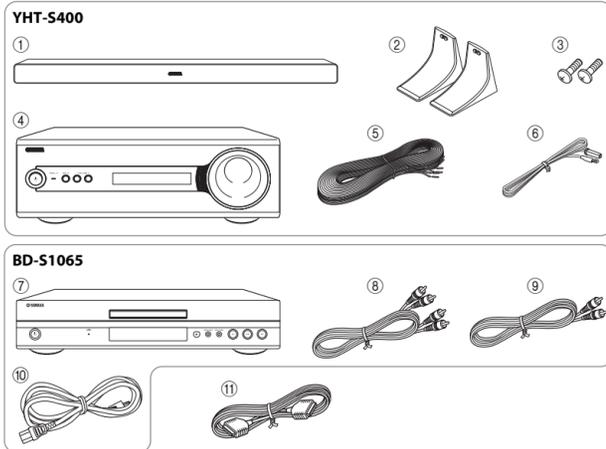


Unpack and check the package contents. The following items are necessary for connecting this system. See the relevant guides or manuals for a complete list of supplied items.


- | | |
|--|----------------------------------|
| ① Speaker (NS-BR300) | ⑦ Blu-ray Disc Player (BD-S1065) |
| ② Stand × 2 (for speaker) | ⑧ Audio pin cable |
| ③ Screw × 2 (for stand) | ⑨ Video pin cable |
| ④ Subwoofer Integrated Receiver (SR-300) | ⑩ Power cable |
| ⑤ Speaker cable | ⑪ HDMI cable |
| ⑥ Indoor FM antenna | |

Note: To complete setup of this system, an optical digital cable and additional HDMI cable are necessary.

2 Placing the speaker

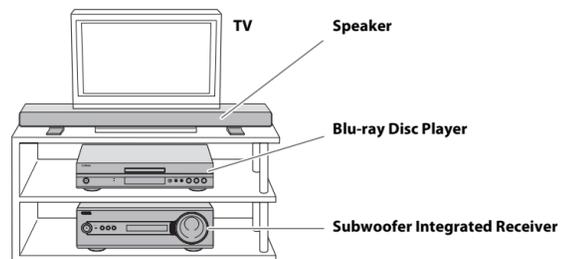


The illustration is one of the images to place this system on the rack. If there is any obstacle (TV stand, etc.) under the speaker, use the supplied stands as shown.

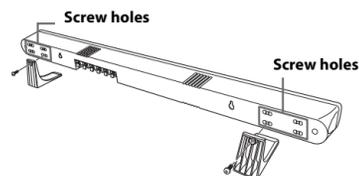

Note: If you are not using the supplied stands, attach the supplied non-skid pads to the bottom of the speaker.


- Put the speaker on the stands and secure them with the supplied screws, as shown.
- You can adjust the height and width at which to attach the stands to the speaker horizontally by selecting screw holes in the back of the speaker. The above illustration shows attaching the stands using the lower and inner screw holes.

3 Connecting the speaker cable to the speaker

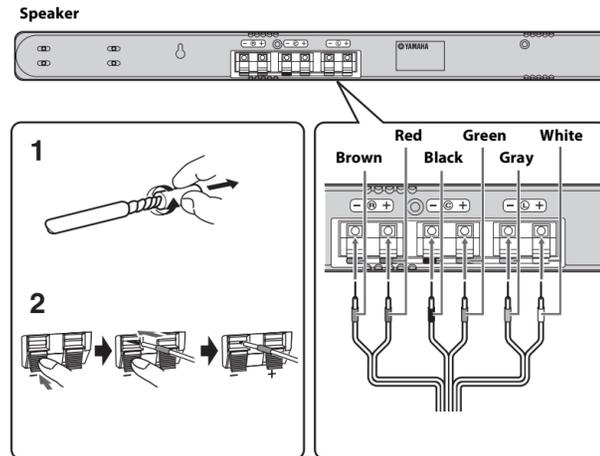


- Twist and pull off the insulation tube on the lead wire of the supplied speaker cable.
- Insert the lead wire into the terminal by matching the wire color with the color-coded terminal on the rear panel, as shown.
- Repeat this process for the remaining lead wires to connect the speaker cable to the speaker.

4 Connecting the speaker cable to the Subwoofer Integrated Receiver

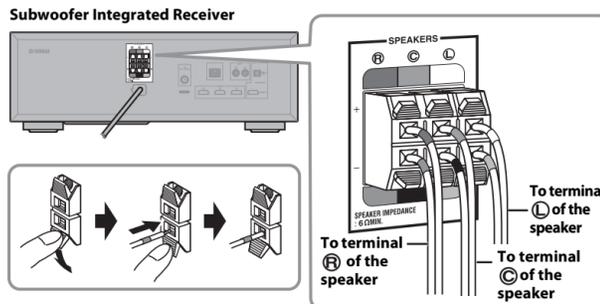

Connect the speaker cable to the Subwoofer Integrated Receiver. Be sure to insert the cable by matching the wire color with the color-coded terminal on the rear panel.

5 Connecting the antenna

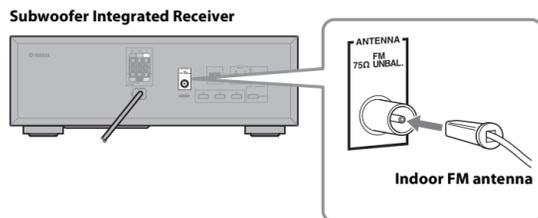


Connect the supplied indoor FM antenna to the Subwoofer Integrated Receiver, as shown. See the guides or manuals for more information about connecting an antenna.

The Blu-ray Disc Player and your TV


This guide introduces two basic examples (A and B as follows) to connect the Blu-ray Disc Player and your TV with Subwoofer Integrated Receiver.

Caution: Disconnect all components from AC outlets before proceeding.

A Connecting via the HDMI cable

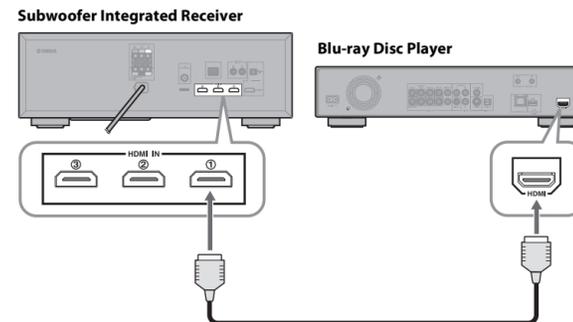

If your TV is HDMI-capable, you can connect it and Blu-ray Disc Player via the Subwoofer Integrated Receiver. Using the supplied HDMI cables, connect the Blu-ray Disc Player's HDMI output jack to the HDMI IN ① jack on the Subwoofer Integrated Receiver, as shown.

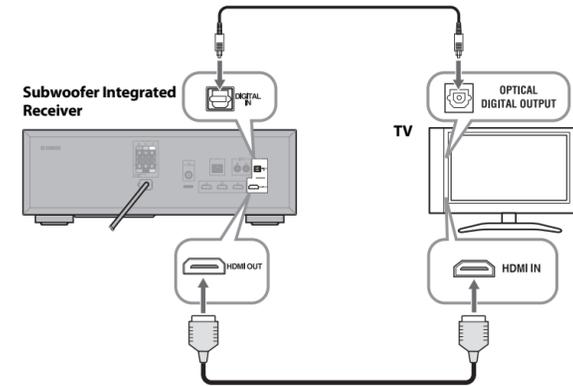


Connect your TV's HDMI jack to the HDMI OUT jack of the Subwoofer Integrated Receiver, using an additional HDMI cable, as shown.

Note: To output sound of a TV from this system, connect the optical digital output jack of your TV and the TV DIGITAL IN jack of the Subwoofer Integrated Receiver via an optical digital cable (not included).

See the guides or manuals for more information about HDMI.

B Connecting without HDMI cables

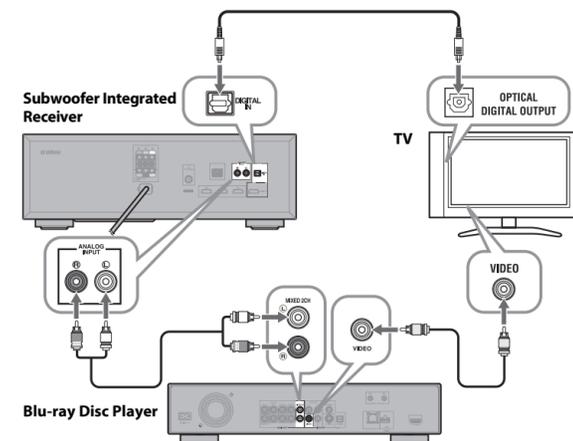


- Use the supplied video pin cable to connect the Blu-ray Disc Player's VIDEO jack to your TV's composite video jack, as shown.
- Use the supplied audio pin cable to connect the Blu-ray Disc Player's MIXED 2CH jacks to the Subwoofer Integrated Receiver's ANALOG INPUT jacks, as shown.
- Use an optical digital cable (not included) to connect your TV's optical digital output jack to the Subwoofer Integrated Receiver's DIGITAL IN jack, so as to output the sound of your TV from the speaker.

Satellite/cable set-top box

This guide introduces how to connect your satellite/cable set-top box with the Subwoofer Integrated Receiver.

Caution: Disconnect all components from AC outlets before proceeding.

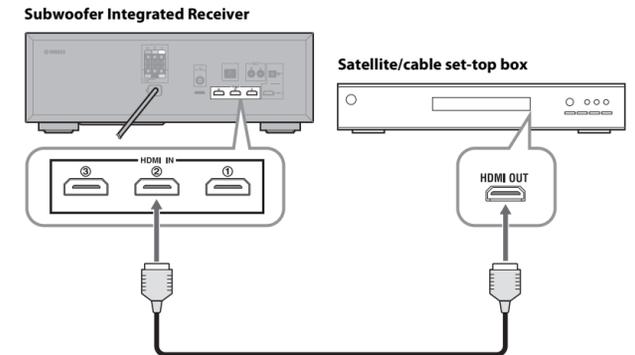

Use an additional HDMI cable to connect your satellite/cable set-top box to the Subwoofer Integrated Receiver's HDMI IN ② jack, as shown.

Almost Finished

- Connect the Subwoofer Integrated Receiver, Blu-ray Disc Player, and your other AV components to suitable AC outlets.
- Turn on the Subwoofer Integrated Receiver first, and then your other AV components.
- Install the batteries in the Subwoofer Integrated Receiver's remote control and the Blu-ray Disc Player's remote control.
- See the relevant guides or manuals for full operating instructions.

Setting the Blu-ray Disc Player

Activating the Secondary audio

Set "Secondary Audio" of the Blu-ray Disc Player ("Setup Menu" → "Settings" → "Audio Video Settings" → "Secondary Audio") to "On" to listen to the most suitable sound for this system.

Preparing for BD-LIVE

BD-LIVE is a new feature of Blu-ray Disc that allows you to download and enjoy movie trailers or bonus features.

Connect the Blu-ray Disc Player to the internet and connect a USB memory device to the Blu-ray Disc Player to use BD-LIVE feature.

Note: For more information about these features, see the manual of the Blu-ray Disc Player.

HDMI control function

You can operate the following functions of this system with the remote control of your TV when the TV (HDMI control function supported) is connected to the HDMI OUT jack of this system.

- Setting this system to standby (conjunction with TV)
- Note:** Automatic power off function of Blu-ray Disc Player is enable while the playback stops and the Setup Menu screen is not displayed.

- Adjusting the volume
- Selecting a device to reproduce TV sounds (this unit or TV)

To activate the HDMI control function, set the parameter of the components respectively as follows.

Blu-ray Disc Player (BD-S1065)

Set "HDMI Control" in the "Settings" of the "Setup Menu" to "Yes".

Subwoofer Integrated Receiver (SR-300)

Set "HDMI CONTROL" in the setup menu to "ON".

The HDMI-capable TV

See the instruction manual to activate the HDMI control (CEC) function.

For external components, refer to the instruction manual supplied with each component.

Time to enjoy your Yamaha home theater system!

Now, relax and enjoy the great sound of your Yamaha home theater system.