# **EXAMAHA**

# **RS150**

### **ASSEMBLY INSTRUCTIONS**

#### INTRODUCTION

Thank you for purchasing the Yamaha Electronic Drum Rack System RS150. Before using, thoroughly read these assembly instructions, and use this product safely and correctly.

### **PRECAUTIONS**

Before using, please read this "Assembly Instruction" sheet, and use this product in a safe and proper manner.

Especially for children, parents or an instructor should teach the children the proper manner in

which to use the device.

#### To prevent against accidents and injury

Please follow the cautions listed below

Caution (including danger, or warning). This mark indicates cautions in which you should pay close attention to.

Acts indicated with this icon are prohibited and should not be attempted.

WARNING If this symbol is ignored and the equipment is used improperly, fatal injury to persons or serious damage could occur.

Always set the instrument on a flat and solid surface. Placement on a sloping, unstable surface or on steps may result in the instrument being unstable and overturning.

Make sure all bolts are tightened firmly. Loose bolts may result in the rack overturning or parts dropping causing injury.

When adjusting the height or angle, do not suddenly loosen the bolt. The pad may drop, the rack or pipes may slip, pinching or

Do not sit or step on the rack. The rack may overturn or be damaged resulting in injury.

Please be careful when children are close to or touching the product. The product has many pipes and arms so careless movement around the product may result in injury

When setting the pads and modules, please pay close attention in regards to the handling and setting of cables. Feet may become entangled in the cables resulting in falls

If this symbol is ignored and the equipment is used improperly, there is a danger of injury to persons handling the equipment, and material damage could occur.

Do not put your hands or feet under the foot pedal or foot switch. They may be pinched resulting in injury.

Watch your fingers when adjusting clamps. They may become pinched resulting in injury.

Be careful around pipe ends, inside the pipe and screw ends. Metal shavings, etc. may injure your fingers.

Do not attach acoustic drums to the electronic drum rack. Clamps may be damaged and drums may drop, causing injury


Specifications are subject to change without notice.

# ■ Handling Precautions

- · Do not alter the product. Doing so may result in damage or deterioration to the product.
- · Do not step on or place heavy objects on the product. It may result in damage.
- Do not use or keep the product in places with extremely high temperature (places in direct sunlight, close to a heater, in a closed car, etc.) or damp (bathroom, outside on a rainy day, etc.). It may result in deformation, discoloration, stickiness, damage or deterioration.
- To clean the product, please wipe with a soft cloth or a damp cloth that has been wrung out thoroughly. If the product is soiled or sticky, use a neutral detergent on a cloth then wipe with a damp cloth that has been wrung out thoroughly to remove any remaining detergent. Do not use benzine, thinner or alcohol as it may result in discoloration or deformation. Also pay close attention so as not to let the water and detergent come into contact with the cushions used in the product, it may result in deterioration.

## **■ Inside This Package** |

Before setup, please make sure that all of the items listed below are present and accounted for. If anything is missing, please contact the dealer from whom you purchased the unit.

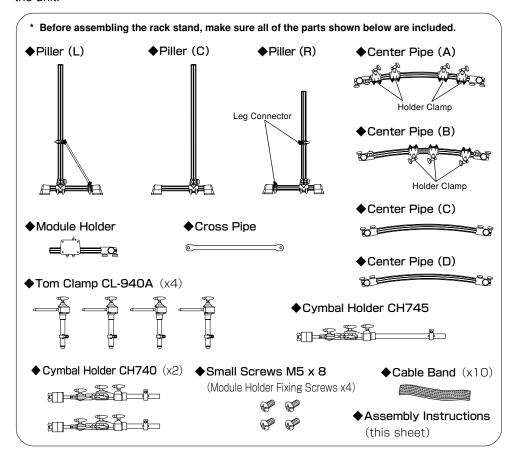

# RS150 Assembly

\* Parts for the RS150's main structure have already been assembled before packing. After removing the unit from the box, follow the instructions described below to complete the assembly. A Phillips (+) screwdriver is required when attaching the DTXTREME IIS. Please prepare one before starting assembly.


### After removing the unit from the box, remove all cushion material.

### Setting up the parts

### Follow the setup order $(1 \sim 9)$ in the diagrams shown below.


- 1 Temporarily remove the leg connector from pillar (R).
- 2 Attach center pipe (D) to pillar (R) and pillar (C), and secure.
- 3 Reattach the leg connector.
- 4 Attach the cross pipe to the leg connector.
- (5) Attach center pipe (C) to pillar (L) and pillar (C), and secure.

- 6 Attach center pipe (B) to pillar (R) and pillar (C), and secure.
- 7 Attach center pipe (A) to pillar (L) and pillar (C), and secure.
- (8) Attach the module holder to pillar (L), and secure.
- 9 Attach the cymbal holders and tom clamps to the holder clamps, and secure.

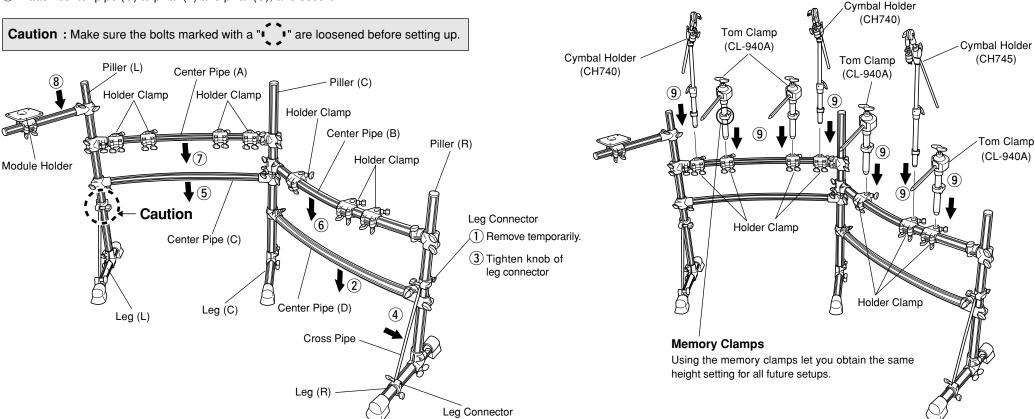



# **■** Optional Parts

### Pad and Drum Trigger Grouping ② PCY130/130S ① DTXTREME IIS **3 PCY150S 4** RHH130 Real Hi-hat Pad Drum Trigger Module Cymbal Pad Cymbal Pad 0 **⑤ TP100 6** TP120SD 9 Snare Stand 10 Hi-hat Stand Drum Pad Drum Pad \*SS652 etc. \*HS-740 etc. **7** KP65 8 Foot Pedal Kick Pad \* DFP-9310 etc

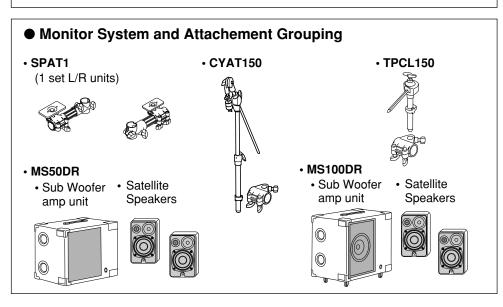

# ■ Set up example

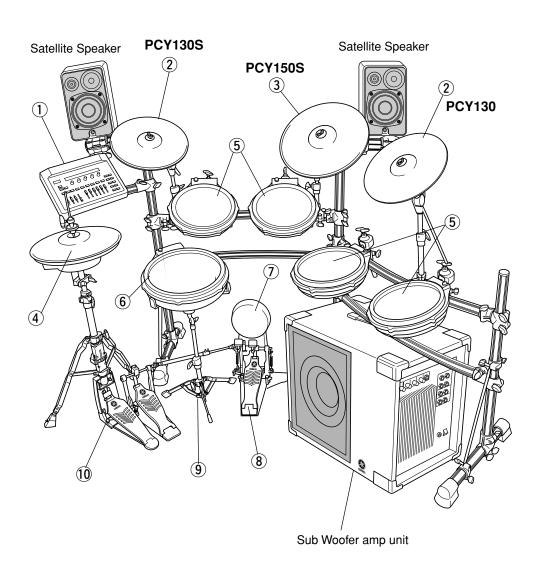

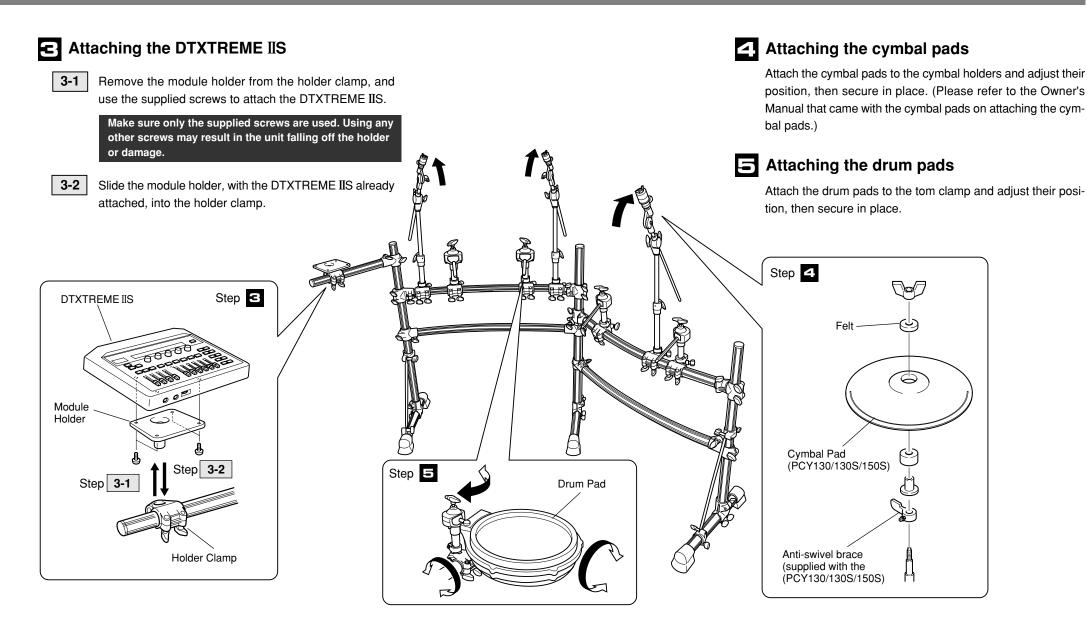

Maker sure all bolts on clamps, pads, etc., are tightened firmly.

However, loose or over-tightened bolts may result in the part falling off and/or damage. Please use caution.

After assembly is complete, setup the kick pad, real hi-hat pad, etc., and connect the cables. Use the supplied cable bands to secure the cables to the frame pipes to keep cables out of the way during performance.

